



(Designed & Manufactured by **RC EXPLORER TEAM**)


Radon Series Firmware Update Procedures

1. Follow the below link to download Radon Series PC interface software.
<https://drive.google.com/file/d/0BxUWOOMINp5qVnZiY2JmUIZCUEE/view?pref=2&pli=1>
2. Decompress the TP_Radon USB link V2.0.rar to TP_Radon USB link V2.0.exe file and install the Radon Series PC interface by execute TP_Radon USB link V2.0.exe.




3. After installation complete, click the logo  to open the PC interface first, then follow below one of two methods to connect the speed control to the PC interface.

Method 1: Connection with the use of USB device

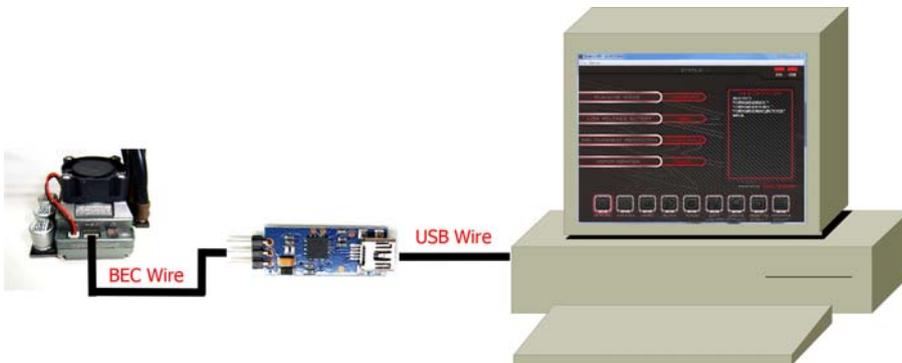


Method 2: Connection with the use of setting card

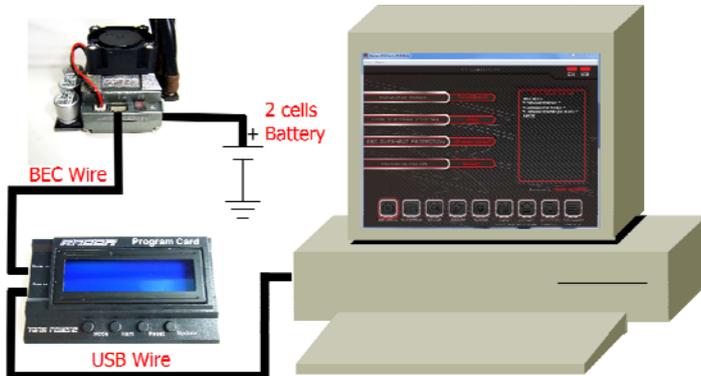



- Just like the below, select “Firmware Update” icon, click the “Update” icon and then select the “RS-Code-V2_x.xup” firmware. After the firmware file is selected, it will be started update until 100% data transfer is completed. After that, the firmware update has been finished.

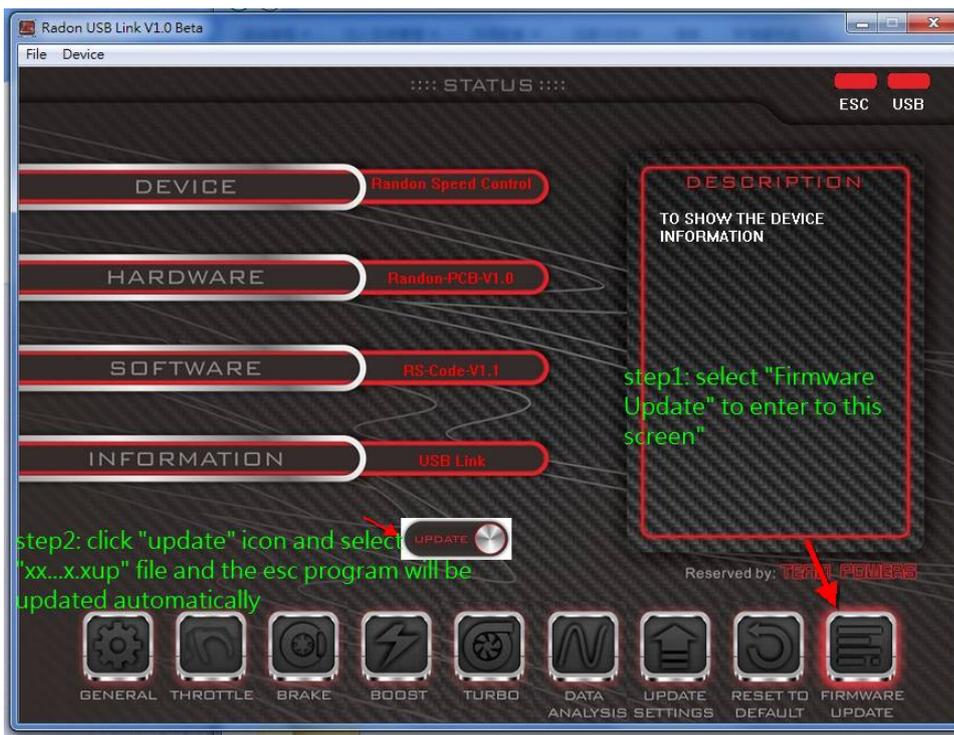

Radon Series LCD Card Update Procedures

- Repeat the above Step 1~3 of radon firmware update procedures, then connect the LCD card with the computer like the below.





2. Just like the below, select "LCD Program Box" from "Device" title, click "Update" icon to select the LCD firmware and then select the "RPS-Code-V2_x.xut". After the LCD firmware file is selected, it will start updating the firmware until 100% data transfer is completed. After that, the LCD firmware updated has been finished.

